
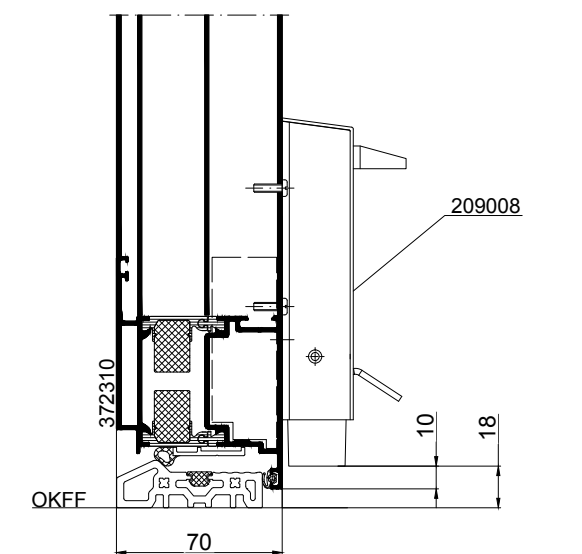
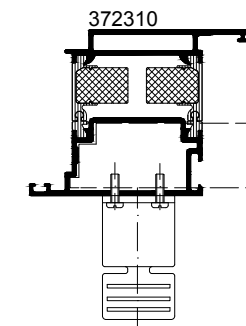
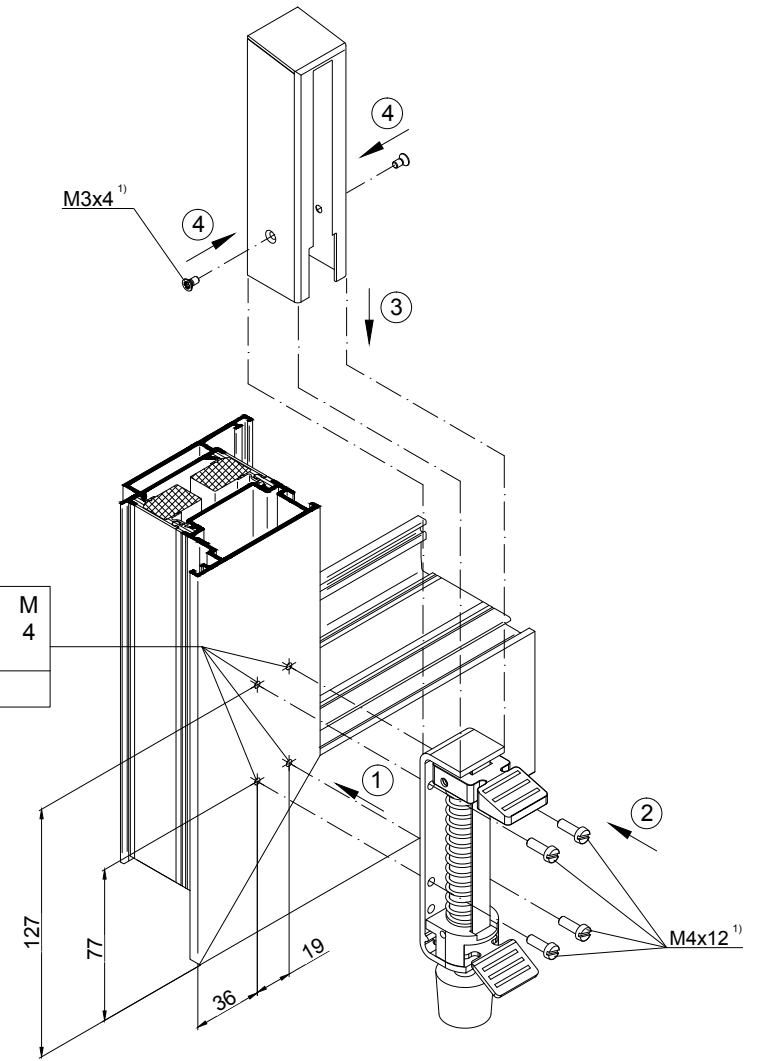
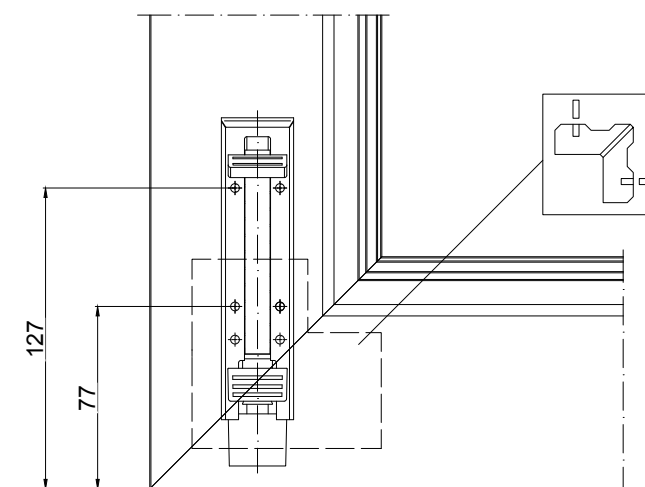
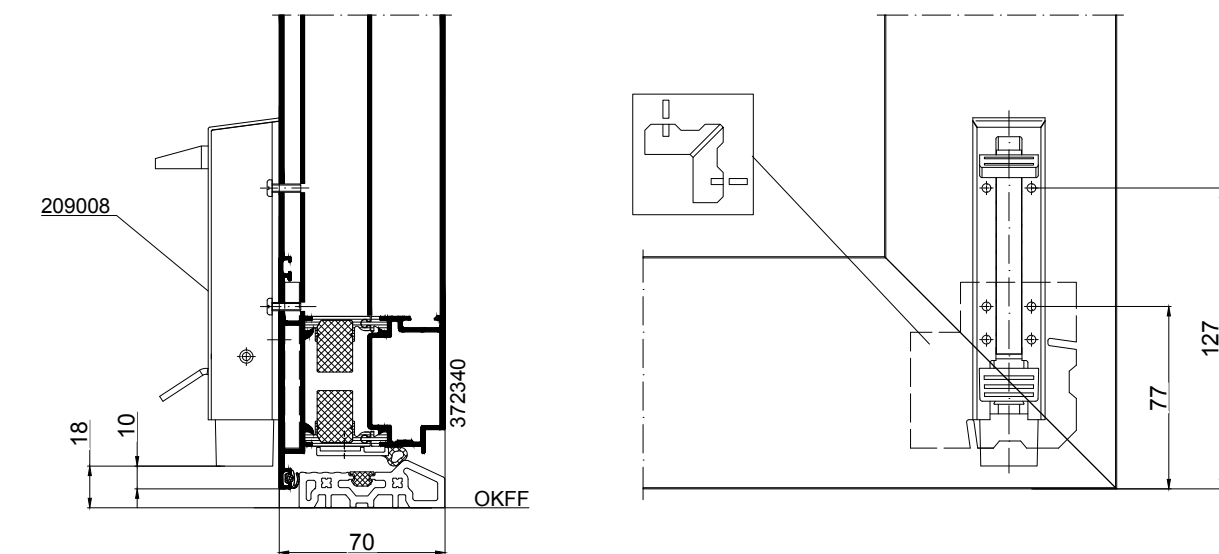
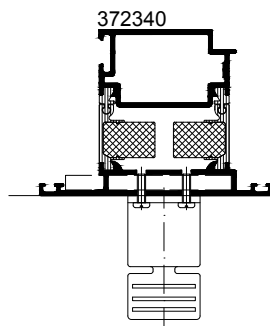


① ... ② ... ③ ...

Montage am kompletten Flügel
 Installation on the complete leaf
 Montage au vantail complet
 Montage op complete vleugel

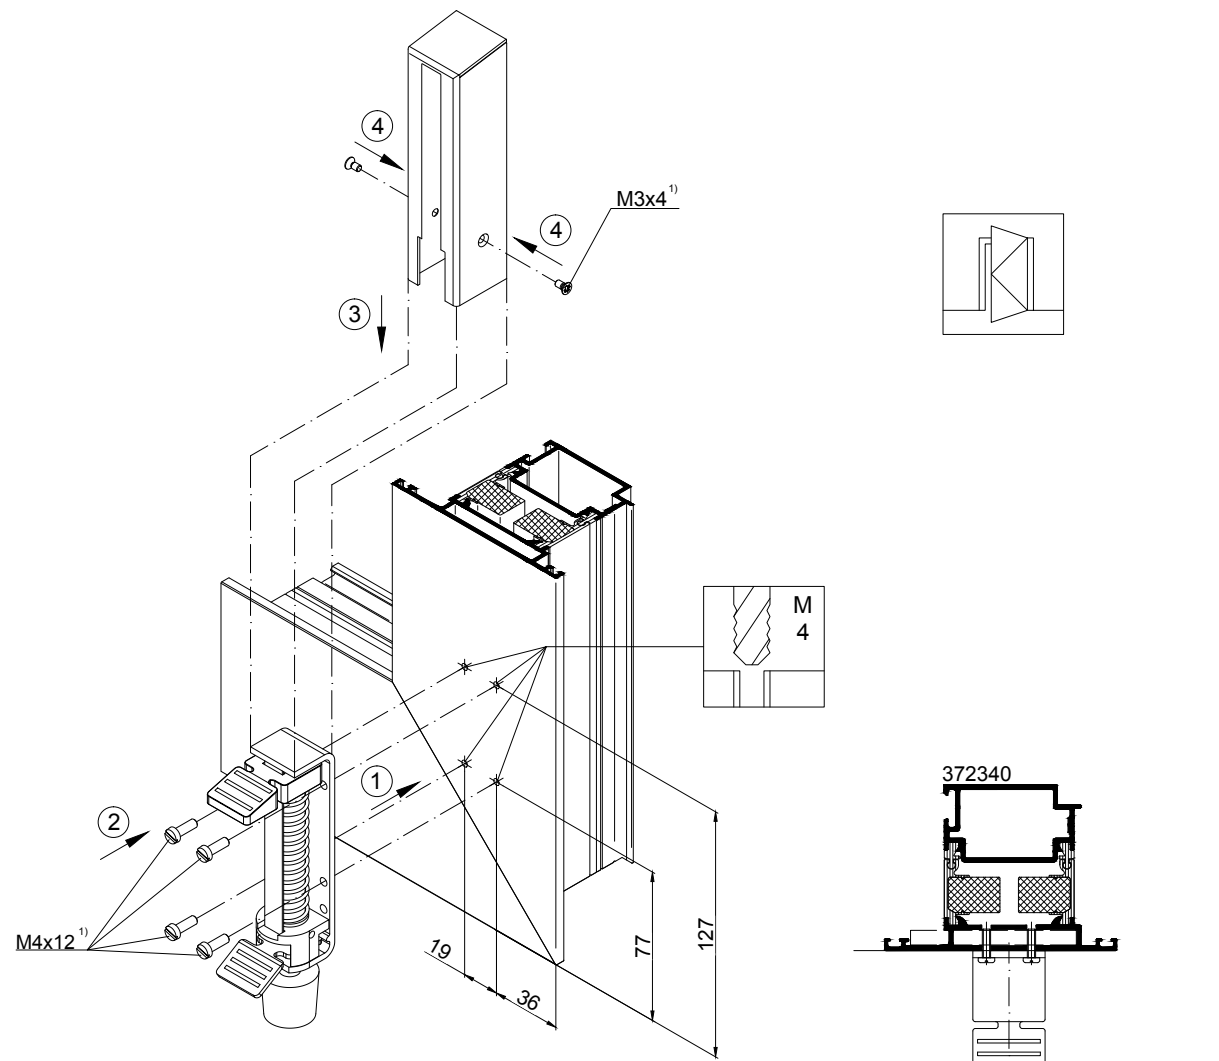

1) in VE enthalten
 Included in PU
 compris dans l'UV
 bijgeleverd in verpakking

Türstopper + Türfeststeller - Türstopper - Einbau	K1011893
Door stops - Door stop - Installation	0100
Arrêt de porte + butée de porte - Arrêt de porte - Montage	
Deurstopper + deurvastzetter - Deurstopper - Inbouw	Schüco ADS